


1) Install sensor plate

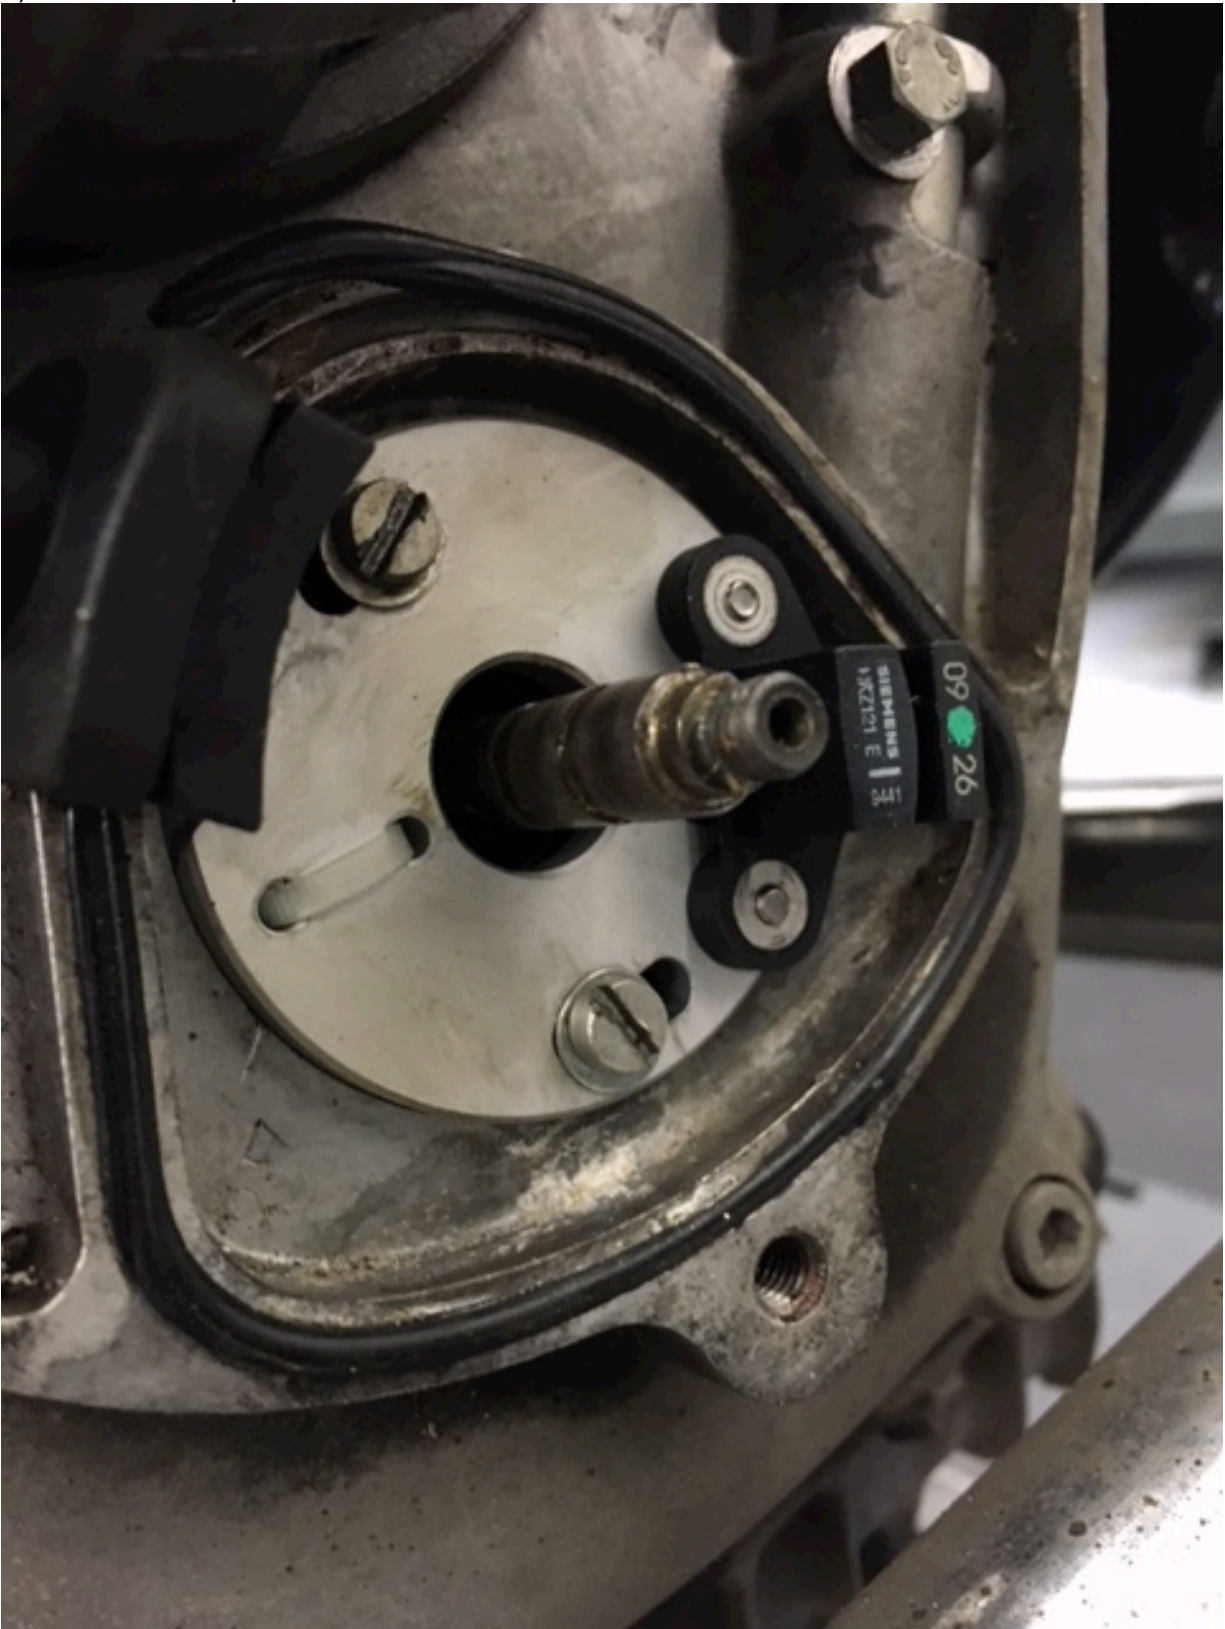

2) Install ICU on brackets





3) Remove points wire, install black wire



4) Install green wire on coil next to other green wire from main harness





5) Install gate




6) Cut grommet and feed wire behind diode board and through grommet






7) Install harness, plug it all in, cable tire to frame



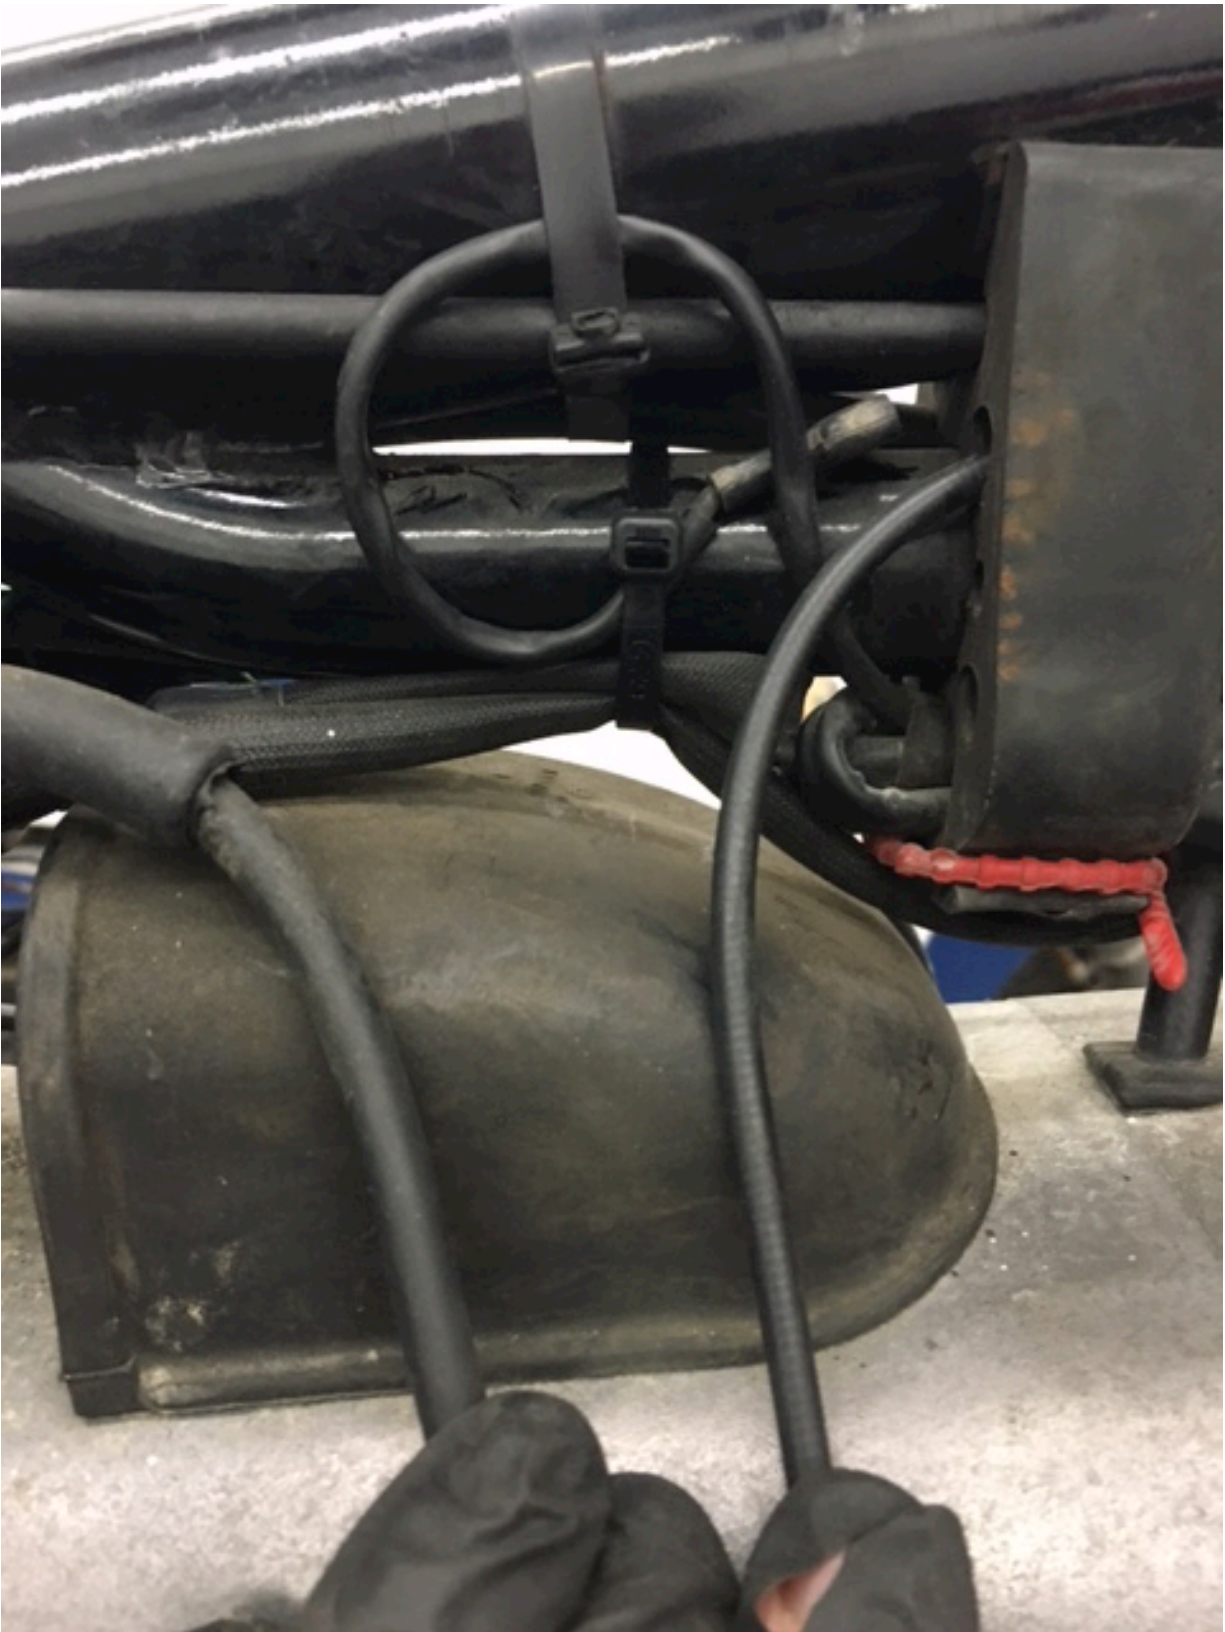


8) Plug sits just above engine and plugs into harness



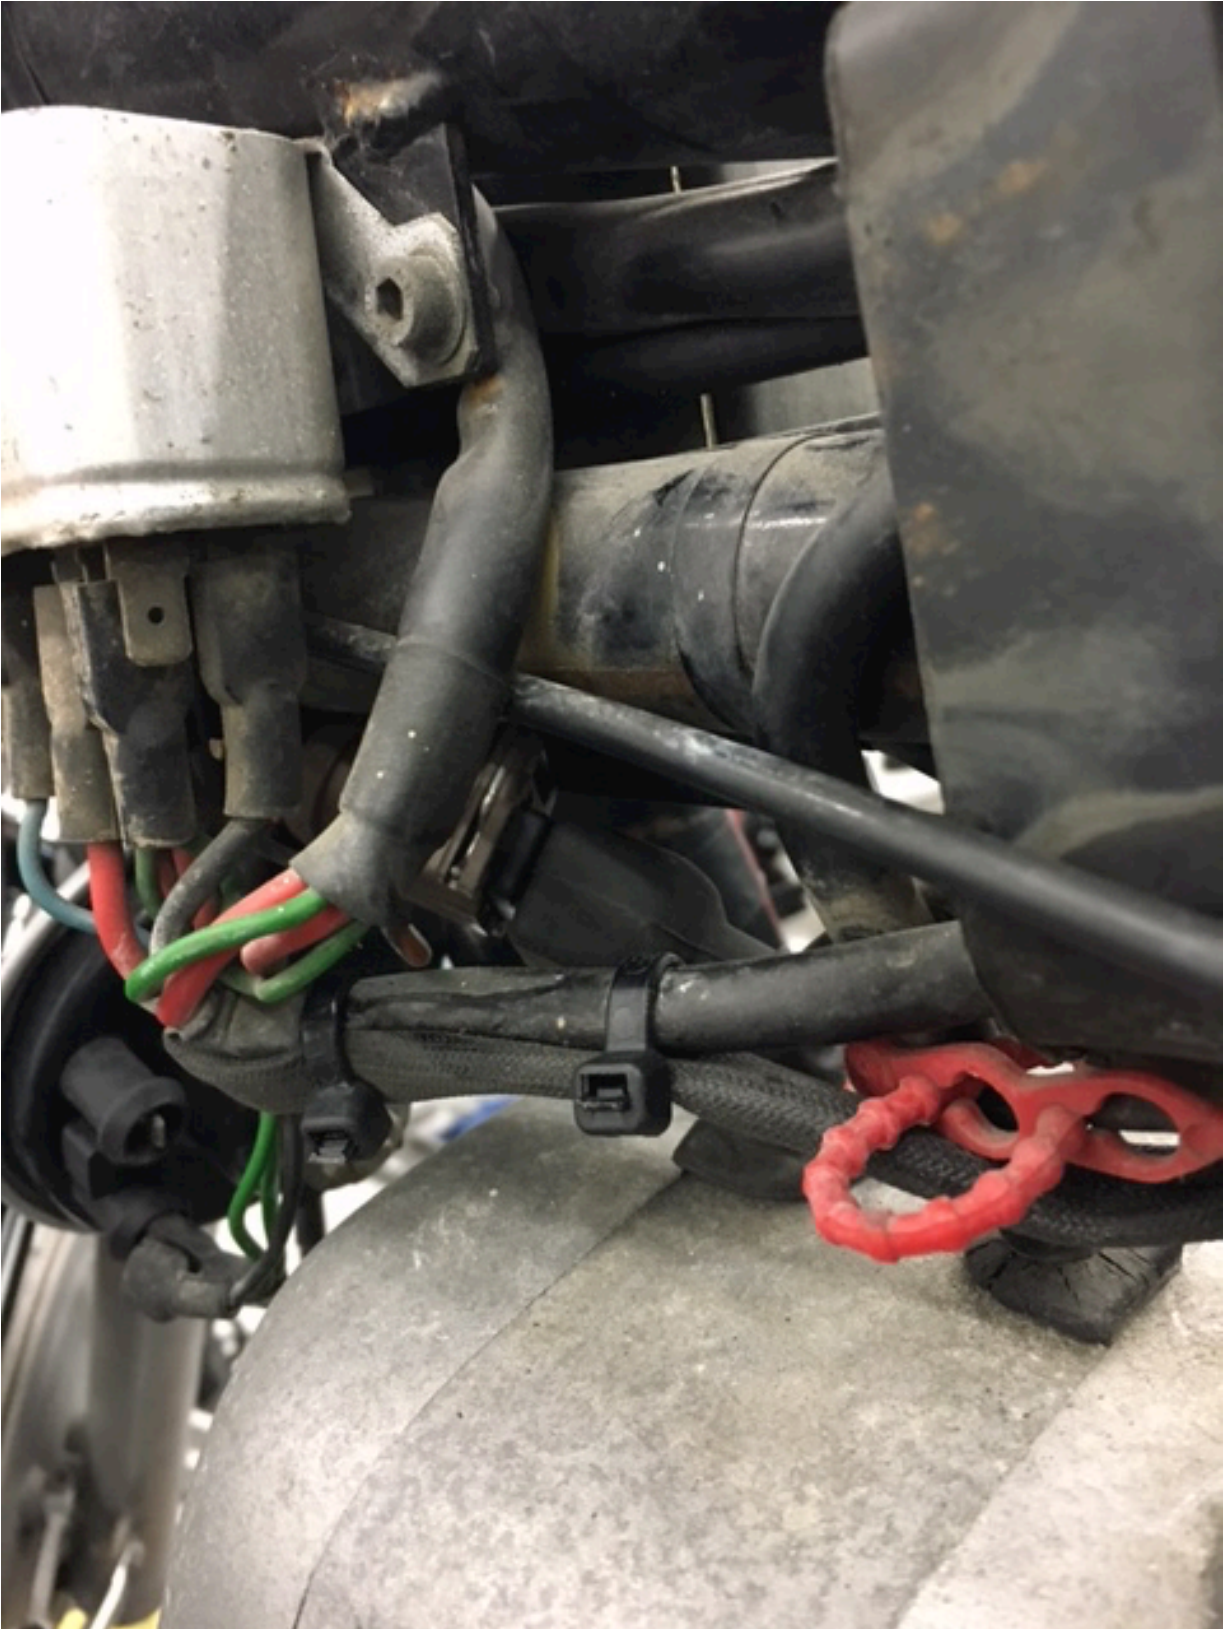

9) Set timing with strobe

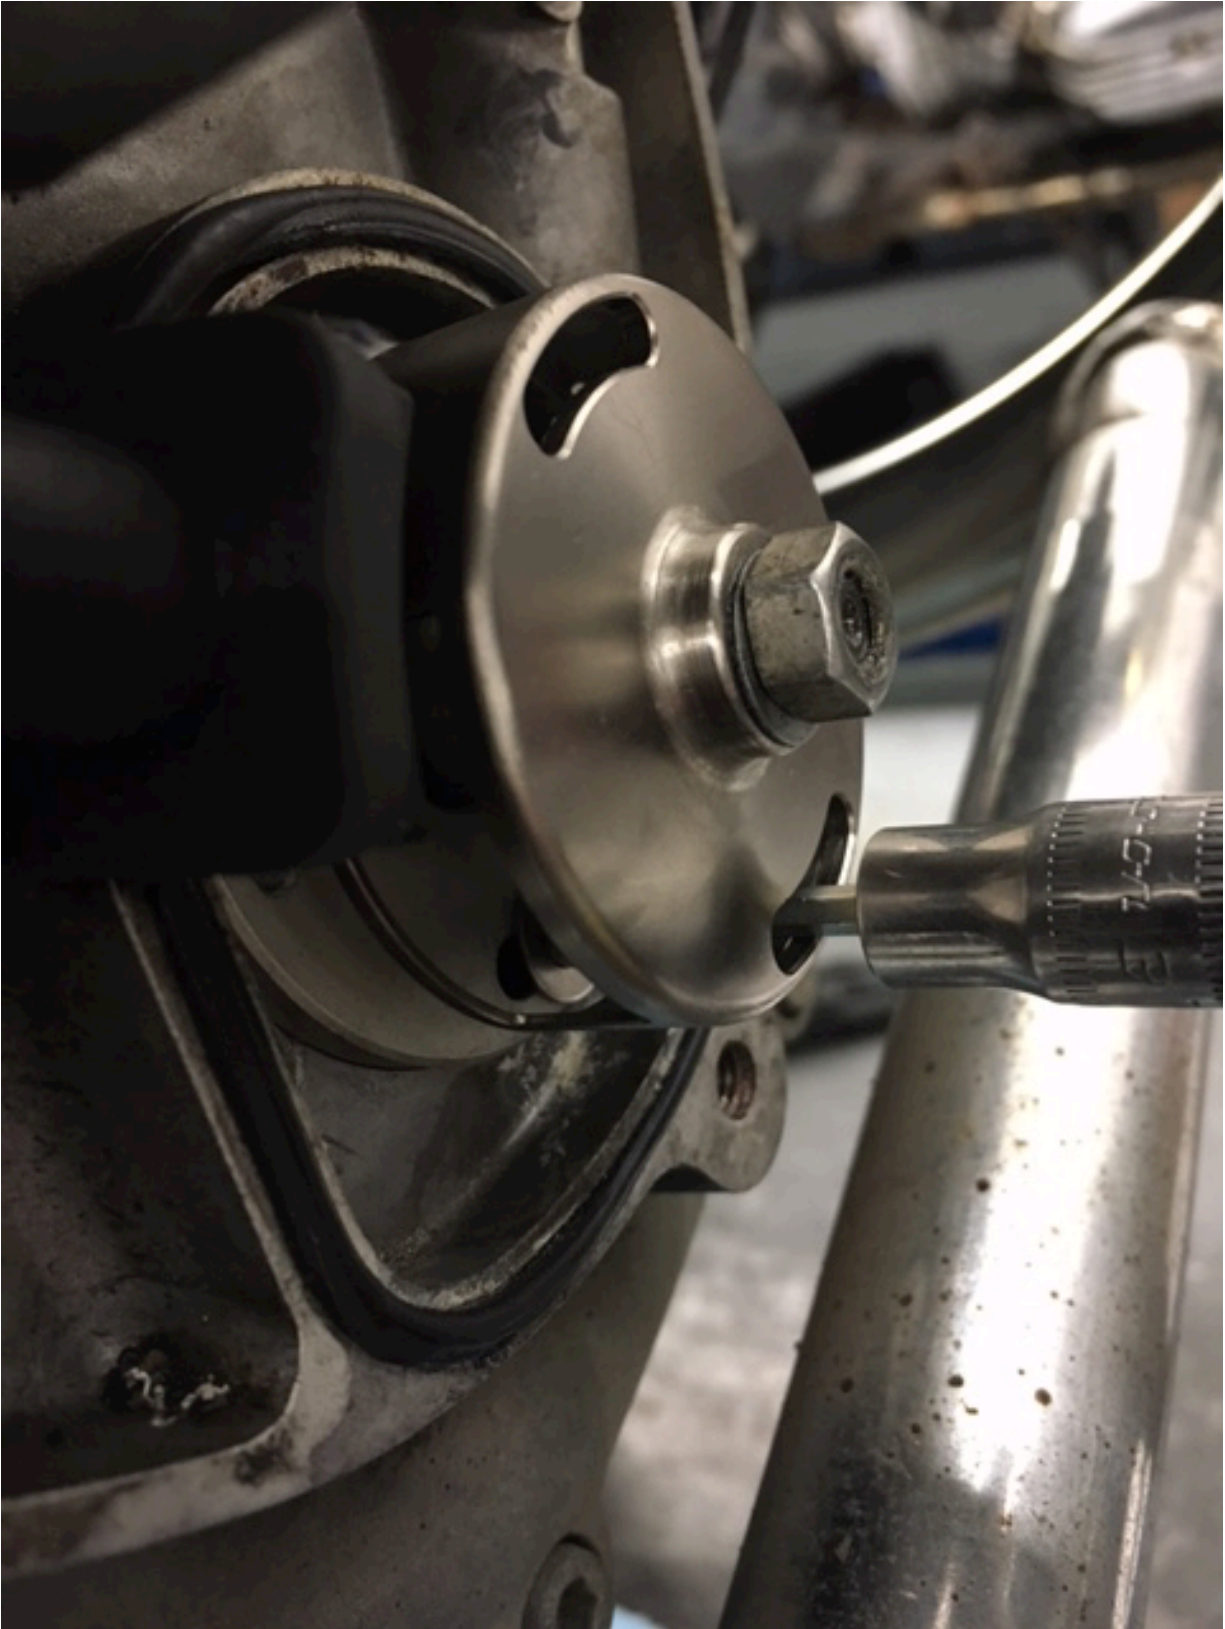

10) Ground wire under coil bracket bolt



