


HOW TO INSTALL

- 1) Lift the motorcycle so that the front wheel is off the ground.
- 2) Remove the wheel, fender, brakes etc. and remove the leg.
- 3) Unscrew the lower bolt in the axle clamp a turn and secure it again only hand tight to prevent an oil leak.
- 4) Open the screwcap on top of the fork leg and remove the spring. Remove the lower bolt and pull the cartridge out.
- 5) Pour all oil out. Let it leak for 30 minutes. Move the inner and outer tube back and forth to release the last remaining oil.
- 6) Mount the REB cartridge in the right leg and the COM cartridge in the left leg.
- 7) Put the cartridge in the leg and mount it, or with the original bolt or with the delivered bolt from TracTive. Tighten it firmly (see bike manual) See pic. 1
- 8) Remove spring and screw cap (if mounted) from the cartridge using spanner 15 and tool 90100068. (See pic. 2)
- 9) Fill the fork with the delivered front fork oil. Air chamber as mentioned in the set-up page. During filling move the inner and outer tube back and forth to fill the space between the bearings.
- 10) Move also during filling the piston rod up and down to suck in oil. If you don't feel damping doing this than mount the needle and screwcap and close the needle and try again.
- 11) Very important is to set the air chamber with the fork compressed and also with piston rod down. (See pic. 3)
- 12) Air chamber is measured from the top outer tube to the oil.
- 13) Put the spring back and mount the correct cap using the same tools as before. Don't forget to put the needle back when removed.
- 14) Mount the screwcap in the outer tube with tool 90100068 (See pic. 4)

≠ TRACTIVE®





Pic.1

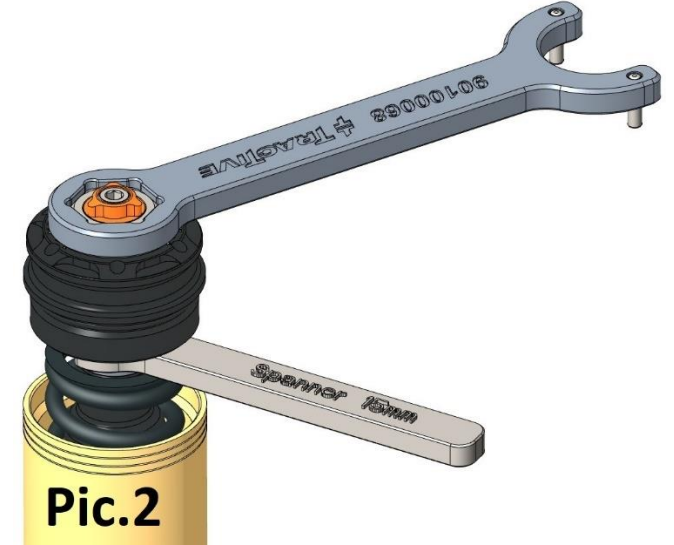

Pic.2

Pic.3

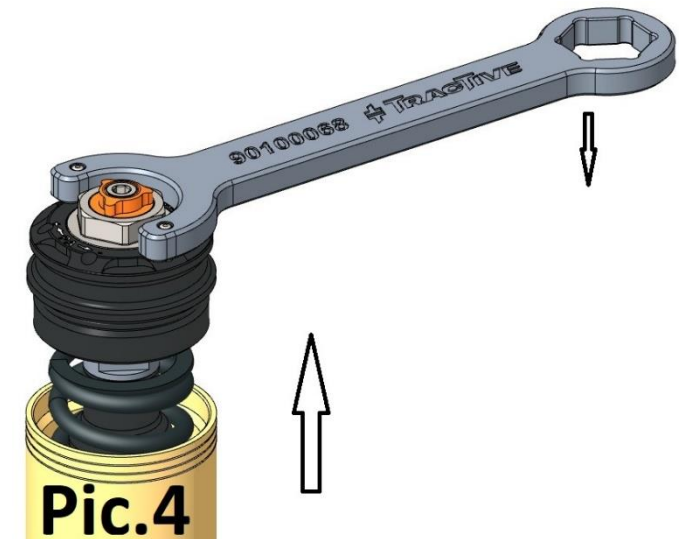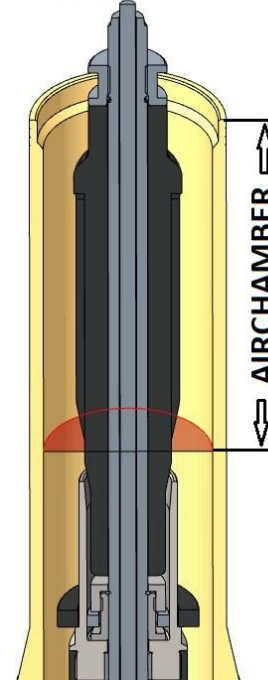

Pic.4

SET -UP

TracTive recommendations: Spring preload COM leg : 15 +12/-0 mm
Spring preload REB leg : 15 +12/-0 mm

Compression damping : 12 clicks
Rebound damping : 12 clicks

Oil SAE : 5
Air chamber : 120 mm

Read more about how to set up the vehicle correctly in the TracTive Owner's manual



Mounting Instructions

Model : CF MOTO 450 MT 2024-
: CF MOTO 450 MT 2024- EXT+15

Part no. : 26CF24-D2301-TR
: 26CF24-D2302-TR

Part numbers with TR(XX) suffix only differ in color

Instruction:90031400 / -

Before installing this product, read the Tractive Owner's manual!

Tractive Suspension B.V. cannot be held responsible for any damage to the shock absorber, vehicle, other property or injury to persons, if the instructions for installing and maintenance are not followed exactly.

No guarantee can be given for the performance and reliability if these instructions are not followed