




INSTRUCTION SHEET BMW F800 GSA REAR 2013 >

- Route the hose of the reservoir as shown on the picture
- Use the added hardware to mount the reservoir to the frame
- Use the original foot rest place for the HPA Knob

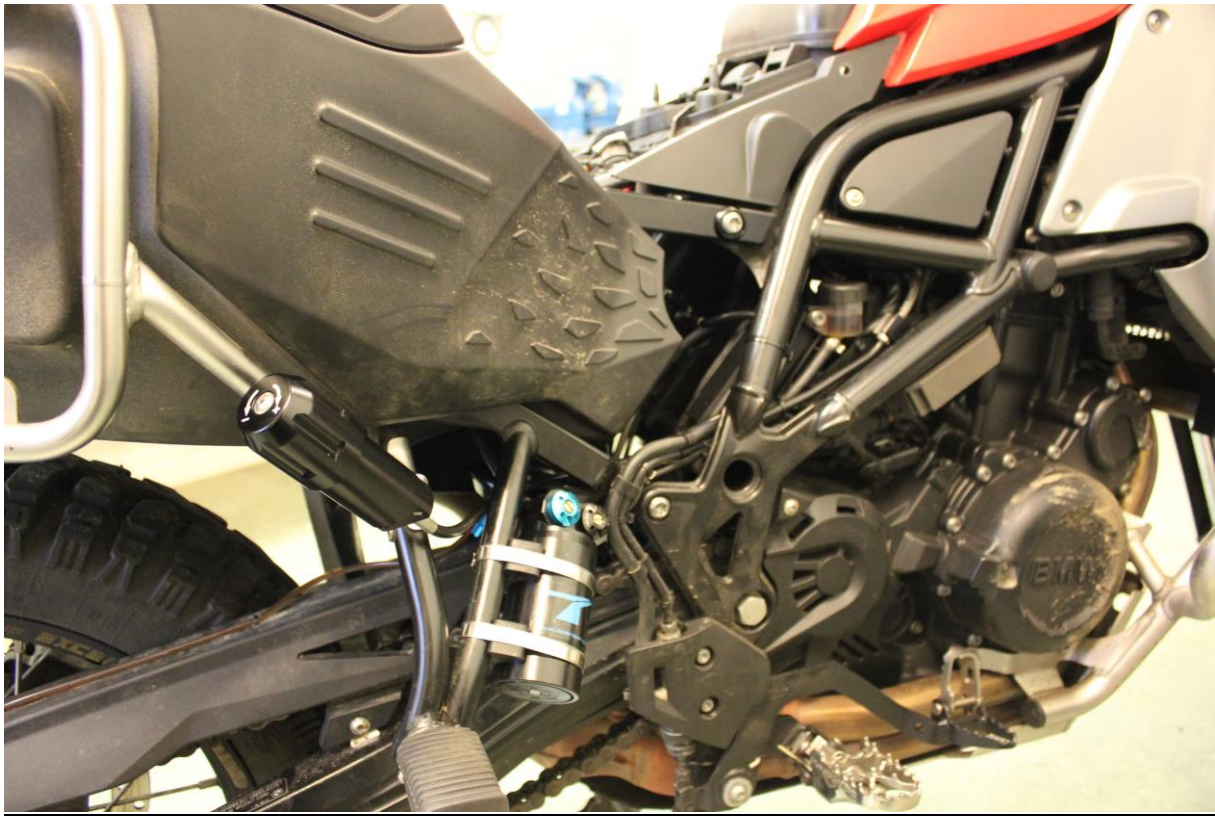



ADDED HARDWARE :

Bolt M6x25		2 pcs
Bracket HPA008	(if with HPA)	1 pc
Support Rubbers		2 pcs
Fastening straps		2 pcs